


**PLAN**

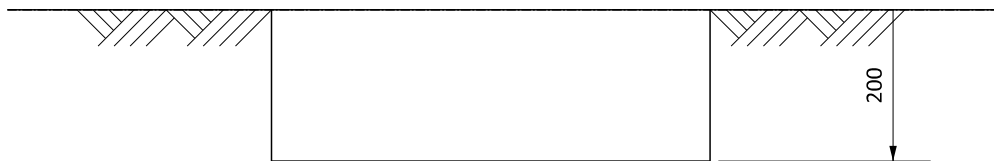

**SECTION**

**NOTES:**

1. Existing surfacing to be sawcut prior to excavation.
2. Concrete strength to be 20 MPa.
3. Base surfaces to be a well trowelled smooth finish.
4. Base surface to be level.
5. Reinststate footpath area (if required).
6. Contractor to leave site clean and tidy, removing any soil and concrete residue from work area.
7. Where bin is located beside a bus shelter, place bins on RH side facing road unless otherwise specified using 4 x 10mm dia. bolts in base to fit bin.